



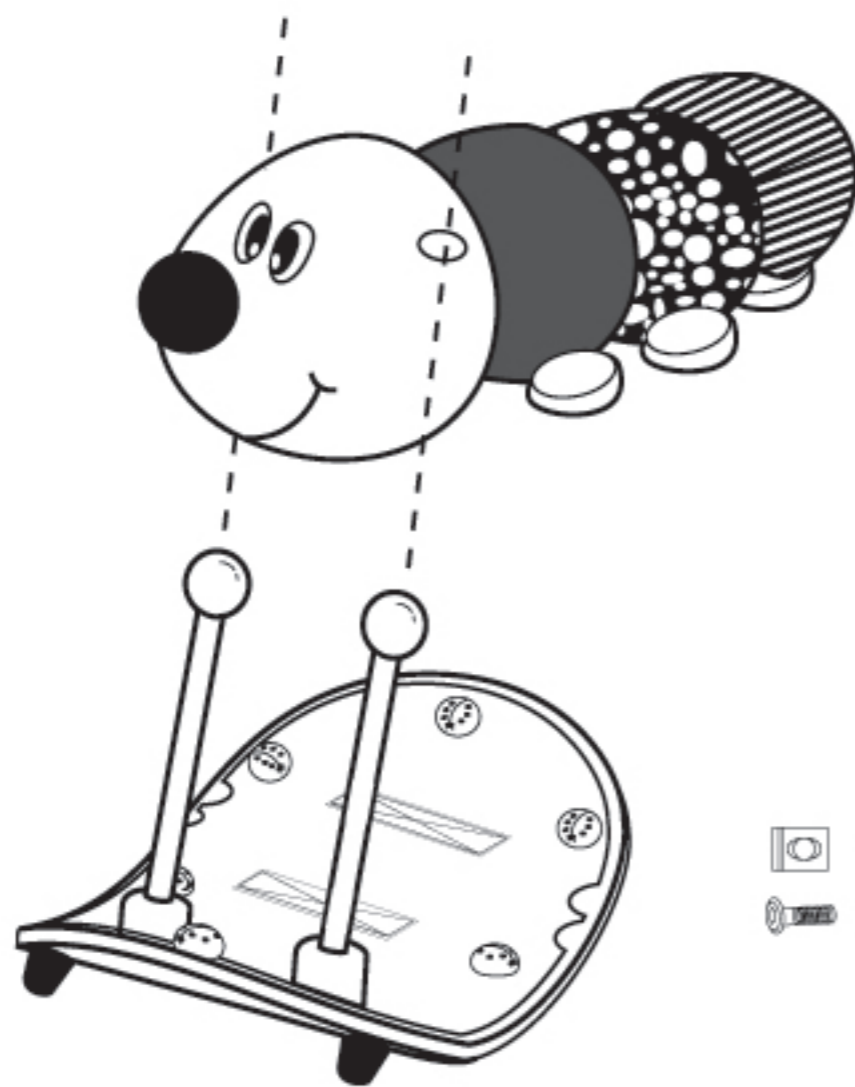

Adult disassembly required when wash is needed.

INSTRUCTION

Adult assistance required in assembly.

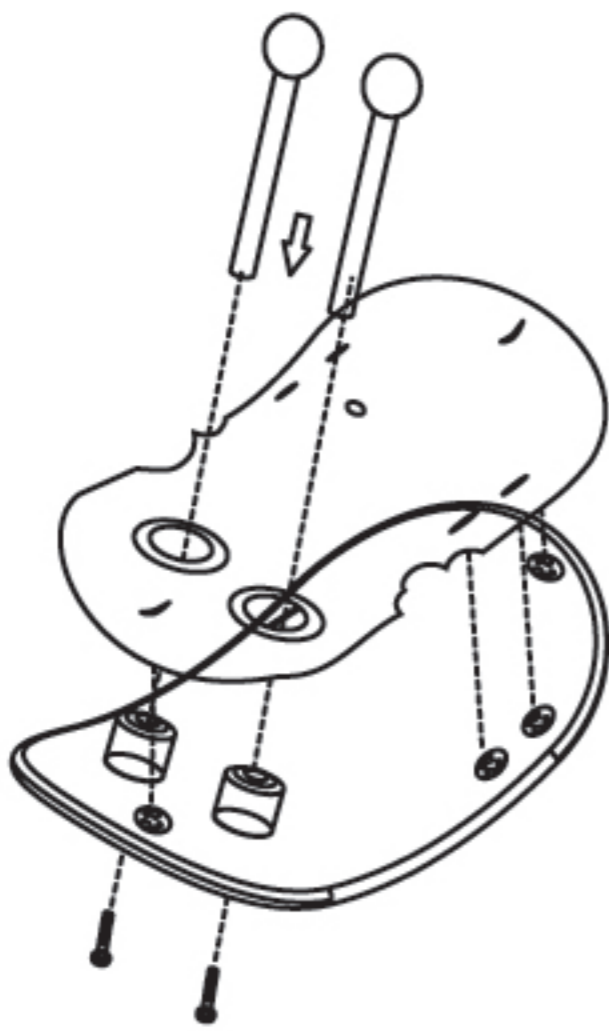


 x 2
 x 2


1. Remove the Caterpillar body from the green fabric leaf-shaped base by opening velcro underneath.



2. Take the bag of Polystyrene foam stuffed out from the Caterpillar's belly.

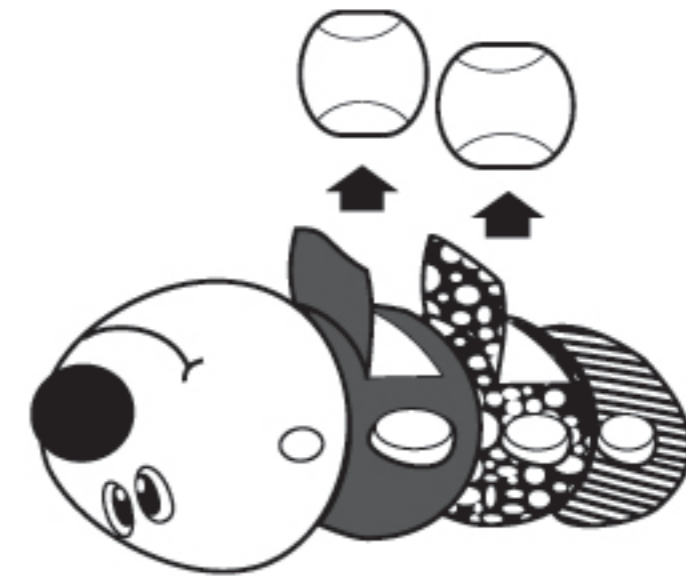

3. Take the green fabric leaf-shaped base out from the curved wood rocking base by unbuttoning the beetle buttons.

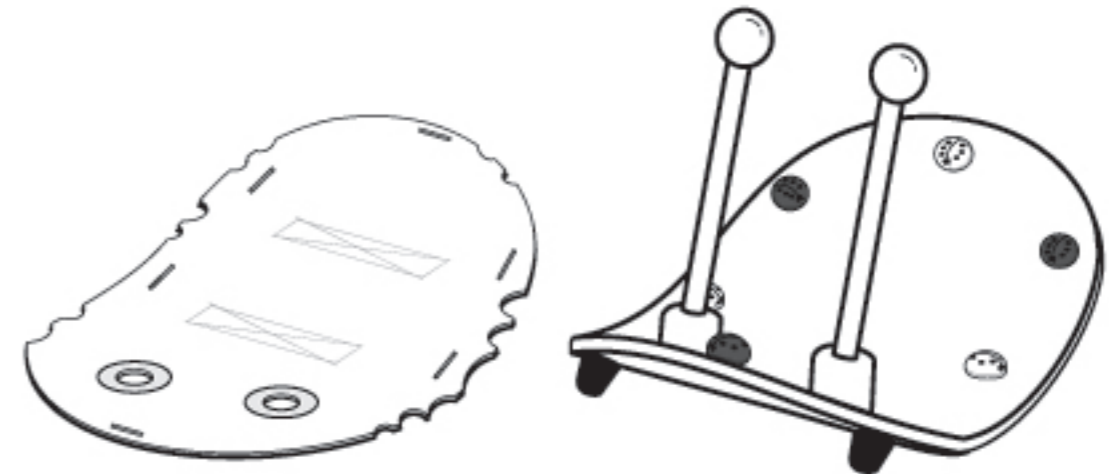

4. Fabric part can be spot-cleaned on the surface only.

Warning!

- Warning! Not to be used by children over 36 months
- Warning! To be used under the direct supervision of an adult.
- Maximum child's weight: 23 kg. (50 lb.)
- Adult disassembly and assembly required when wash is needed.
- Disassembly and assembly instruction included.
- Inspect all fittings regularly to make sure of its function.
- Fabric part can be spot-cleaned on the surface.
- All new materials: Polyester stuffing.

 **WARNING:**
CHOKING HAZARD-
 Small parts / balls
 Not for children under 3 years.